



INSTRUCTIONS FOR ADJUSTING SETTING OF RELIEF VALVE 402633

- 1.0 Make sure there is no pressure to the valve.
- 2.0 Break and remove the pressure tag wire (3).
- 3.0 Unscrew the cap (1).
- 4.0 Adjust the setscrew (2) clockwise to increase the set pressure, counterclockwise to decrease the set pressure. Recommended adjustment is one full turn maximum at a time.
- 5.0 Test the valve by pressurizing through the inlet port.
- 6.0 Depressurize the valve before making further required adjustments.
- 7.0 Replace the cap (1) after adjustment is completed. Rewire the pressure tag. Replace the pressure tag if it reads other than the set pressure.

High Pressure Equipment Company

P.O. Box 8248, 1222 Linden Avenue Erie, PA 16505 U.S.A. · Phone: (814) 838-2028 · 1-800-289-7447 · Fax: (814) 838-6075